

Nebulae

Secondary Functions



+ = Secondary goodness.

To access the secondary functions menu, hold down the Source button and choose a secondary knob. Then release source, and all knobs return to their primary functions!

To reset all functions on Nebulae, hold SOURCE and press / click the PITCH encoder down.

SPEED: INPUT LEVEL

From line level to modular level, adjust it here!

PITCH: PITCH FLUCTUATION

Adds a random amount of pitch deviation to the audio loop.

START: GRAIN POSITION
Adds random probability to where new grains are generated from.

DENSITY: GRAIN DISPLACEMENT
Adjusts the amount of random time displacement between the grains.

BLEND: GRANULAR FM
Controls the modulation index of FM applied to each grain.

RECORD: CIRCULAR RECORDING
Nebulae will continuously record audio into the buffer.



SIZE: GRAIN PANNING
Adjusts the amount of random panning applied to the grains.

OVERLAP: GRAIN SIZE
Controls the amount of random deviation applied to each grain size.

WINDOW: GRAIN MUTING
Adjusts the chance that Nebulae will randomly mute an individual grain.

FREEZE: GRAIN TRIGGER
Changes the source gate input into a grain trigger.

FILE: FILE ORDER

Choose the direction to play your samples. Fwd, rev, random.

FILE » SOURCE

Hold File and tap Source to reload samples on the USB. Zero re-boot!